 
 
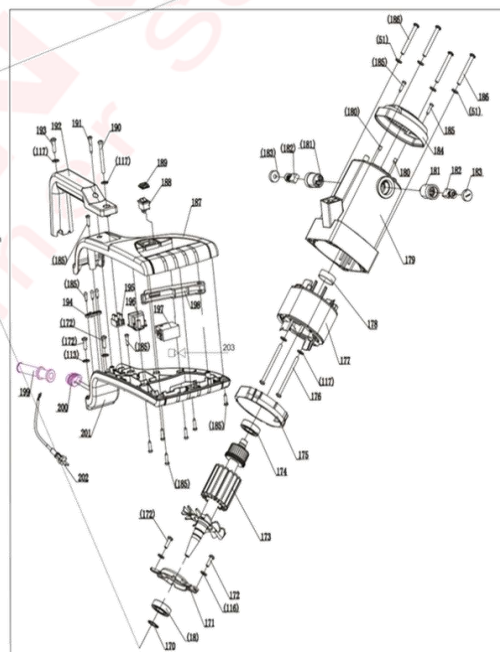 


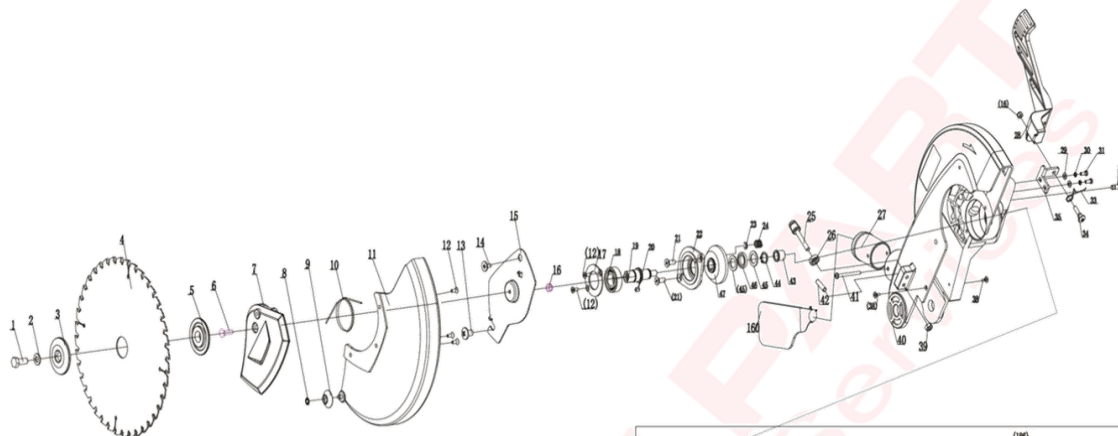

مورد تایید است
واحد کنترل کیفیت

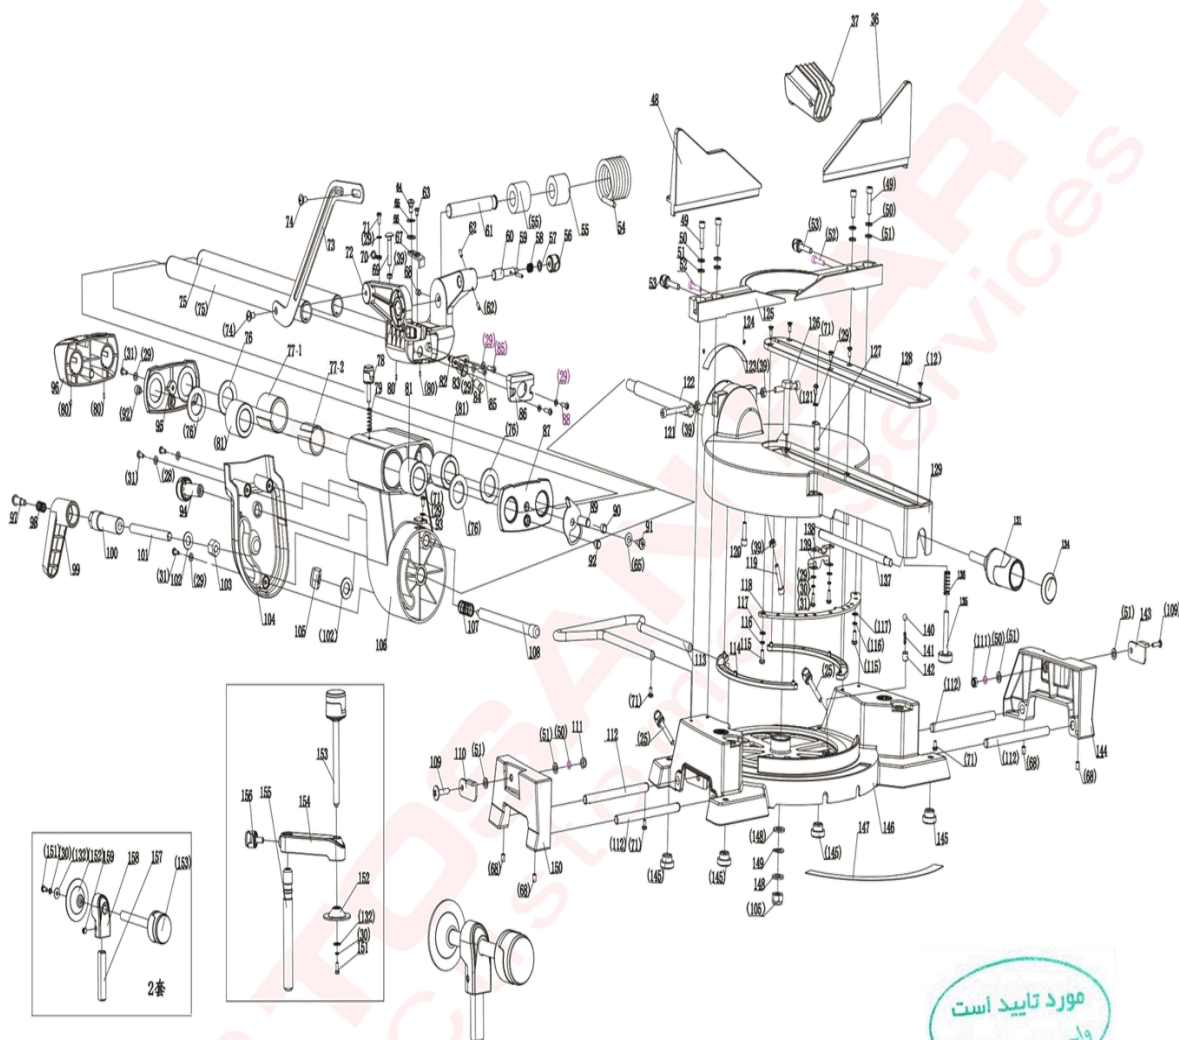

مورد تایید است
واحد کنترل کیفیت

Sliding Miter Saw Model 5920LS

Number used	Technical code	CODE	Name of the piece	ROW
1	01-5920LS	01	Hex bolt	1
1	02-5920LS	02	Thick washer	2
1	03-5920LS	03	Outer flange	3
1	04-5920LS	04	Saw blade	4
1	05-5920LS	05	Inner flange	5
1	06-5920LS	06	Cross sound head bolt with square neck	6
1	07-5920LS	07	Low blade guard support plate	7
1	08-5920LS	08	Star washer	8
1	09-5920LS	09	Roller	9
1	10-5920LS	10	Low blade guard spring	10
1	11-5920LS	11	Low blade guard	11
10	12-5920LS	12	Cross head sunk screw	12
1	13-5920LS	13	Special screw	13
1	14-5920LS	14	Guard plate step screw	14
1	15-5920LS	15	Guard pivot plate	15
2	16-5920LS	16	Hex locknut	16
1	17-5920LS	17	Bearing press plate	17
2	18-5920LS	18	Bearing	18
1	19-5920LS	19	Output shaft	19
1	20-5920LS	20	Key	20
2	21-5920LS	21	Cross head sunk screw	21
1	22-5920LS	22	Gear cover	22
1	23-5920LS	23	E type ring	23
1	24-5920LS	24	Gear lock spring	24
3	25-5920LS	25	Depth adjustable knob	25
1	26-5920LS	26	M6 nut	26
1	27-5920LS	27	Dust port	27
1	28-5920LS	28	Safety lock lever	28
18	29-5920LS	29	Flat washer	29
8	30-5920LS	30	Spring washer	30
10	31-5920LS	31	Cross head screw	31
1	32-5920LS	32	Gear lock pin assy	32

Sliding Miter Saw Model 5920LS				
Number used	Technical code	CODE	Name of the piece	ROW
1	33-5920LS	33	Safety lock lever spring	33
1	34-5920LS	34	Safety lock lever screw	34
1	35-5920LS	35	Safety lock lever bracket	35
1	36-5920LS	36	Sub-fence, right	36
1	37-5920LS	37	Dust guide plate	37
2	38-5920LS	38	Cross head sunk screw	38
5	39-5920LS	39	Hex nut	39
1	40-5920LS	40	Up blade guard	40
1	41-5920LS	41	Cross head screw	41
1	42-5920LS	42	H.S.set screw	42
1	43-5920LS	43	Bush	43
1	44-5920LS	44	Retaining ring	44
2	45-5920LS	45	Gear washer	45
1	46-5920LS	46	Shock absorption rubber ring	46
1	47-5920LS	47	Gear	47
1	48-5920LS	48	Sub-fence, left	48
4	49-5920LS	49	H.S.screw	49
6	50-5920LS	50	Spring washer	50
8	51-5920LS	51	Flat washer	51
2	52-5920LS	52	H.S.bolt	52
2	53-5920LS	53	Sub fence lock knob	53
1	54-5920LS	54	Torsion spring	54
2	55-5920LS	55	Spring bush	55
1	56-5920LS	56	Pin knob	56
1	57-5920LS	57	Pin plate	57
1	58-5920LS	58	Pin spring	58
1	59-5920LS	59	Elastic pin	59
1	60-5920LS	60	Lock pin	60
1	61-5920LS	61	Pivot shaft	61
2	62-5920LS	62	H.S.set screw	62
1	63-5920LS	63	Orientation pin	63
1	64-5920LS	64	Screw	64

Sliding Miter Saw Model 5920LS				
Number used	Technical code	CODE	Name of the piece	ROW
2	65-5920LS	65	Wave ring	65
1	66-5920LS	66	Thin ring	66
1	67-5920LS	67	Moving plate	67
5	68-5920LS	68	H.S.set screw	68
1	70-5920LS	70	Cord clmap	69
1	69-5920LS	69	Round head bolt with square neck	70
6	71-5920LS	71	Cross head screw	71
1	72-5920LS	72	Up blade guard bracket	72
1	73-5920LS	73	Link	73
2	74-5920LS	74	Link screw	74
2	75-5920LS	75	Rail	75
4	76-5920LS	76	Wool ring	76
1	77-1-5920LS	77-1	Bearing spacer	77
1	77-2-5920LS	77-2	Bearing spacer	78
1	78-5920LS	78	Rail lock knob	79
1	79-5920LS	79	Rail lock knob spring	80
4	80-5920LS	80	Elastic pin	81
3	81-5920LS	81	Liner bearing	82
1	82-5920LS	82	H.S.set screw	83
1	83-5920LS	83	Laser bracket	84
1	84-5920LS	84	Laser diode	85
2	85-5920LS	85	H.S.bolt	86
1	86-5920LS	86	Laser cover	87
1	87-5920LS	87	Bearing front cover	88
2	88-5920LS	88	Cross head screw	89
1	89-5920LS	89	Converting plate assy	90
1	90-5920LS	90	Cushion	91
1	91-5920LS	91	Arm bearing screw	92
2	92-5920LS	92	Cusion pin	93
1	93-5920LS	93	Bevel pointer	94
1	94-5920LS	94	Angle knob	95
1	95-5920LS	95	Bearing rear cover	96

Sliding Miter Saw Model 5920LS				
Number used	Technical code	CODE	Name of the piece	ROW
1	96-5920LS	96	Rear connnection sleeve	97
1	97-5920LS	97	Lock handle screw	98
1	98-5920LS	98	Handle spring	99
1	99-5920LS	99	Locking handle	100
1	100-5920LS	100	Bevel lock shaft	101
1	101-5920LS	101	Bevel lock rod	102
2	102-5920LS	102	Flat washer	103
1	103-5920LS	103	Hex nut	104
1	104-5920LS	104	Arm rear cover	105
2	105-5920LS	105	Locknut	106
1	106-5920LS	106	Arm	107
1	107-5920LS	107	Bevel orientation spring	108
1	108-5920LS	108	Bevel orientation pin	109
2	109-5920LS	109	Cross head screw	110
1	110-5920LS	110	Feeding block plate, left	111
2	111-5920LS	111	Locknut	112
4	112-5920LS	112	Ext.wing	113
1	113-5920LS	113	Rear wing	114
2	114-5920LS	114	Friction plate	115
2	115-5920LS	115	Cross head screw	116
4	116-5920LS	116	Spring washer	117
8	117-5920LS	117	Flat washer	118
1	118-5920LS	118	Ball orientation plate	119
1	119-5920LS	119	H.S.bolt	120
1	120-5920LS	120	H.S.bolt	121
2	121-5920LS	121	H.S.bolt	122
1	122-5920LS	122	Arm rotation shaft	123
1	123-5920LS	123	Bevel angle scale label	124
1	124-5920LS	124	Rivet	125
1	125-5920LS	125	Fence	126
1	126-5920LS	126	H.S.bolt	127
1	127-5920LS	127	Miter pointer	128

Sliding Miter Saw Model 5920LS				
Number used	Technical code	CODE	Name of the piece	ROW
1	128-5920LS	128	Table insert	129
1	129-5920LS	129	Working table	130
1	131-5920LS	131	Miter locking handle	130
3	132-5920LS	132	Big flat washer	131
1	134-5920LS	134	Miter locking handle cover	132
1	136-5920LS	136	Adjustable thread rod spring	133
1	135-5920LS	135	Adjustable thread rod	134
1	137-5920LS	137	Press rod	135
1	138-5920LS	138	Press rod plate	136
1	139-5920LS	139	Working table lock plate	137
1	140-5920LS	140	Ball	138
1	141-5920LS	141	Column spring	139
1	142-5920LS	142	H.S.set screw	140
1	143-5920LS	143	Feeding block plate, right	141
1	144-5920LS	144	Ext. table, right	142
4	145-5920LS	145	Pad	143
1	146-5920LS	146	Base	144
1	147-5920LS	147	Miter scale label	145
2	148-5920LS	148	Big flat washer	146
1	149-5920LS	149	Saddle type ring	147
1	150-5920LS	150	Ext. table, left	148
3	151-5920LS	151	Cross head screw	149
3	152-5920LS	152	Clamp plate	150
3	153-5920LS	153	Clamp lock knob	151
1	154-5920LS	154	Clamp link	152
1	155-5920LS	155	Clamp shaft	153
1	156-5920LS	156	Lock knob,A	154
2	157-5920LS	157	Lock shaft	155
2	158-5920LS	158	Clamp bracket	156
2	159-5920LS	159	H.S.set screw	157
1	160-5920LS	160	Dust bag assy	158
1	170-5920LS	170	Retaining ring	159

Sliding Miter Saw Model 5920LS				
Number used	Technical code	CODE	Name of the piece	ROW
1	171-5920LS	171	Bearing press plate	160
4	172-5920LS	172	Cross head screw	161
1	173-5920LS	173	Armature	162
1	174-5920LS	174	Bearing	163
1	175-5920LS	175	Baffle ring	164
2	176-5920LS	176	Cross head self-tapping screw	165
1	177-5920LS	177	Stator	166
1	178-5920LS	178	Rubber ring	167
1	179-5920LS	179	Motor house	168
2	180-5920LS	180	H.S.pyramid end screw	169
2	181-5920LS	181	Carbon brush holder	170
2	182-5920LS	182	Carbon brush	171
2	183-5920LS	183	Carbon brush holder cap	172
1	184-5920LS	184	Rear cover	173
13	185-5920LS	185	Cross head self-tapping screw	174
4	186-5920LS	186	Cross head screw	175
1	187-5920LS	187	Handle up cover	176
1	188-5920LS	188	Laser switch	177
1	189-5920LS	189	Dust-proof cover	178
1	190-5920LS	190	Cross head self-tapping screw	179
1	191-5920LS	191	Cross head self-tapping screw	180
1	192-5920LS	192	Carry handle	181
1	193-5920LS	193	Cross head screw	182
1	194-5920LS	194	Clamp plate	183
1	195-5920LS	195	Terminal block	184
1	196-5920LS	196	Transformer	185
1	197-5920LS	197	Switch	186
1	198-5920LS	198	Switch button	187
1	199-5920LS	199	Cord protection tube	188
1	200-5920LS	200	Cord protection tube,2 hole	189
1	201-5920LS	201	Handle,low half	190
1	202-5920LS	202	CORD-H07RN_F(2*1.5-4M)	191
1	203-5920LS	203	Capacitor	192