




TOSAN PART
Customer Services

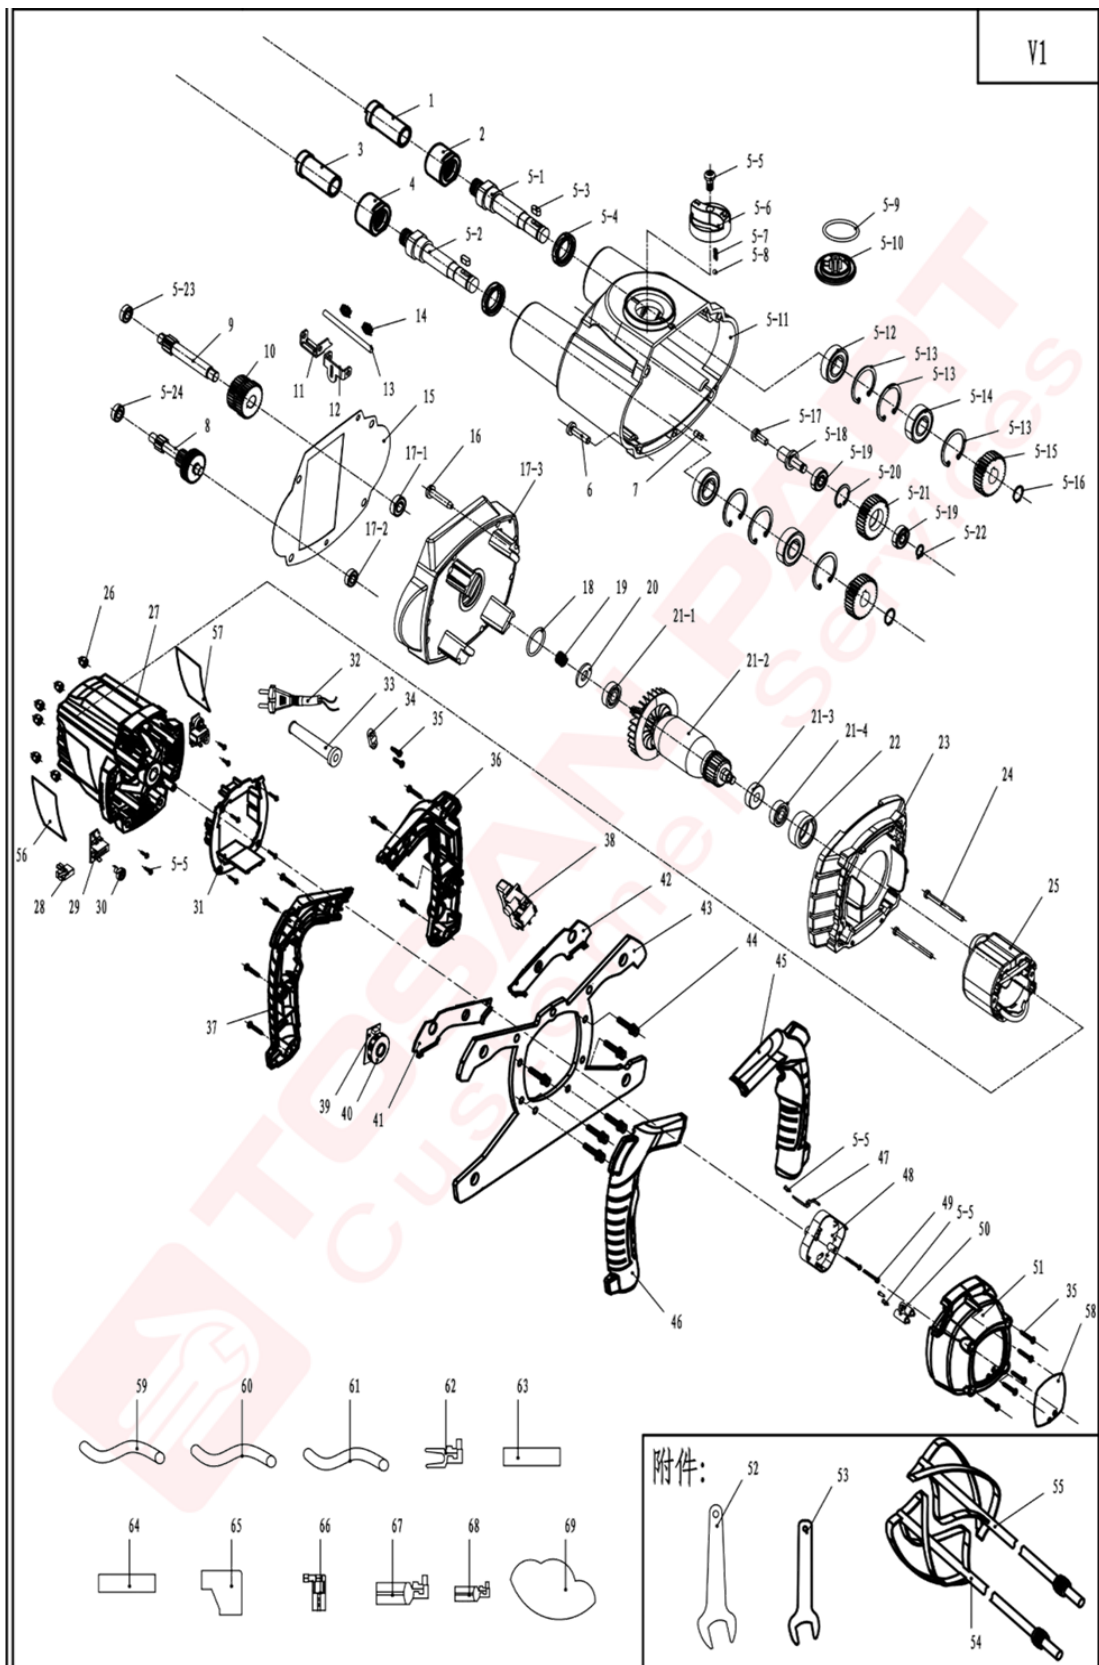

Mixer 0092				
Number used	Technical code	CODE	Name of the piece	ROW
1	01-0092	1	Right connector	1
1	02-0092	2	Right socket	2
1	03-0092	3	Left connector	3
1	04-0092	4	Left socket	4
1	05-0092	5	Head shell assembly	5
1	05.1-0092	5.1	Left output shaft (with groove)	6
1	05.2-0092	5.2	Right output shaft (without groove)	7
2	05.3-0092	5.3	Flat key	8
2	05.4-0092	5.4	Skeleton oil seal	9
12	05.5-0092	5.5	Cross recessed self-tapping screw	10
1	05.6-0092	5.6	Gear shifting knob	11
1	05.7-0092	5.7	Knob spring	12
1	05.8-0092	5.8	Steel ball	13
1	05.9-0092	5.9	O-ring	14
1	05.10-0092	5.1	Gear shifting dial	15
1	05.11-0092	5.11	Head shell	16
2	05.12-0092	5.12	Bearing 6003RS	17
6	05.13-0092	5.13	Elastic retaining ring for hole	18
2	05.14-0092	5.14	Bearing 6202RS	19
2	05.15-0092	5.15	Level three large gear(30teeth)	20
2	05.16-0092	5.16	Elastic retaining ring for shaft	21
1	05.17-0092	5.17	Half-round head inner hexagon	22
1	05.18-0092	5.18	Idler shaft	23
2	05.19-0092	5.19	Bearing 608Z3	24
1	05.20-0092	5.2	Elastic retaining ring for hole	25
1	05.21-0092	5.21	Idler	26
1	05.22-0092	5.22	Shaft retaining ring	27
1	05.23-0092	5.23	Bearing 609RS	28
1	05.24-0092	5.24	Bearing 608RS	29
4	06-0092	6	Three-combination screw	30
2	07-0092	7	Cylindrical pin	31
1	08-0092	8	Level two gear shaft assembly	32

Mixer 0092				
Number used	Technical code	CODE	Name of the piece	ROW
1	09-0092	9	Level three gear shaft	33
1	10-0092	10	Level two double gear	34
1	11-0092	11	B Shift fork B	35
1	12-0092	12	A Shift fork A	36
1	13-0092	13	Gear shifting guide rail	37
2	14-0092	14	Shift fork spring	38
1	15-0092	15	Paper gasket	39
4	16-0092	16	Cross recessed self-tapping screw	40
1	17-0092	17	Middle cover assembly	41
1	17.1-0092	17.1	Bearing 609RS	42
1	17.2-0092	17.2	Bearing 608	43
1	17.3-0092	17.3	Middle cover	44
1	18-0092	18	O-ring	45
1	19-0092	19	Rotor spring	46
1	20-0092	20	Wool pad	47
1	21-0092	21	Rotor assembly	48
1	21.1-0092	21.1	Bearing 6000RS	49
1	21.2-0092	21.2	Rotor	50
1	21.3-0092	21.3	Magnetic ring	51
1	21.4-0092	21.4	Bearing 608RS	52
1	22-0092	22	Bearing sleeve	53
1	23-0092	23	Windshield ring	54
2	24-0092	24	Cross recessed self-tapping screw	55
1	25-0092	25	Stator	56
6	26-0092	26	Locking nut, galvanized	57
1	27-0092	27	Housing	58
1	28-0092	28	carbon brush(2pcs)	59
1	29-0092	29	Brush holder(1pc)	60
2	30-0092	30	Disc spring	61
1	31-0092	31	Machine casing cover plate	62
1	32-0092	32	×Cable wire H05VV-2C×1 2.2M	63
1	33-0092	33	Sheath	64

Mixer 0092				
Number used	Technical code	CODE	Name of the piece	ROW
1	34-0092	34	Cable wire pressing plate	65
15	35-0092	35	Cable wire pressing plate	66
1	36,45-0092	36,45	Right lower handle & Right upper handle	67
1	37,46-0092	37,46	Left lower handle & Left upper handle	68
1	38-0092	38	Switch assembly	69
1	39-0092	39	Potentiometer	70
1	40-0092	40	Speed control wheel	71
1	41-0092	41	Right plastic partition	72
1	42-0092	42	Left plastic partition	73
1	43-0092	43	Iron bracket	74
6	44-0092	44	Inner hexagon three-combination bolt	75
1	47-0092	47	Alarm contact piece	76
1	48-0092	48	Soft start	77
2	49-0092	49	Cross recessed self-tapping screw	78
1	50-0092	50	Transparent lampshade	79
1	51-0092	51	Back cover	80
1	52-0092	52	Wrench 28#	81
1	53-0092	53	Wrench M9+22#	82
1	54-0092	54	Paddle (right)	83
1	55-0092	55	Paddle (Left)	84
1	56-0092	56	Parameter label	85
1	57-0092	57	logo label	86
1	58-0092	58	Back cover label	87
1	59-0092	59	Lead wire 0.75mm ² ×320	88
1	60-0092	60	Lead wire 0.75mm ² ×240	89
1	61-0092	61	Lead wire 0.75mm ² ×330	90
2	62-0092	62	Y-shaped plug buckle Ø3.2	91
0.2M	63-0092	63	Heat shrink tubing Ø3	92
0.2M	64-0092	64	Heat shrink tubing Ø5	93
5	65-0092	65	Elbow sheath Ø6.3	94
5	66-0092	66	Elbow connector with attachment Ø6.3	95



Mixer 0092				
Number used	Technical code	CODE	Name of the piece	ROW
2	67-0092	67	Phosphor bronze insert spring with attachment 4.8	96
5	68-0092	68	Phosphor bronze insert spring with attachment 2.8	97
150G	69-0092	69	Grease	98