 
 
 


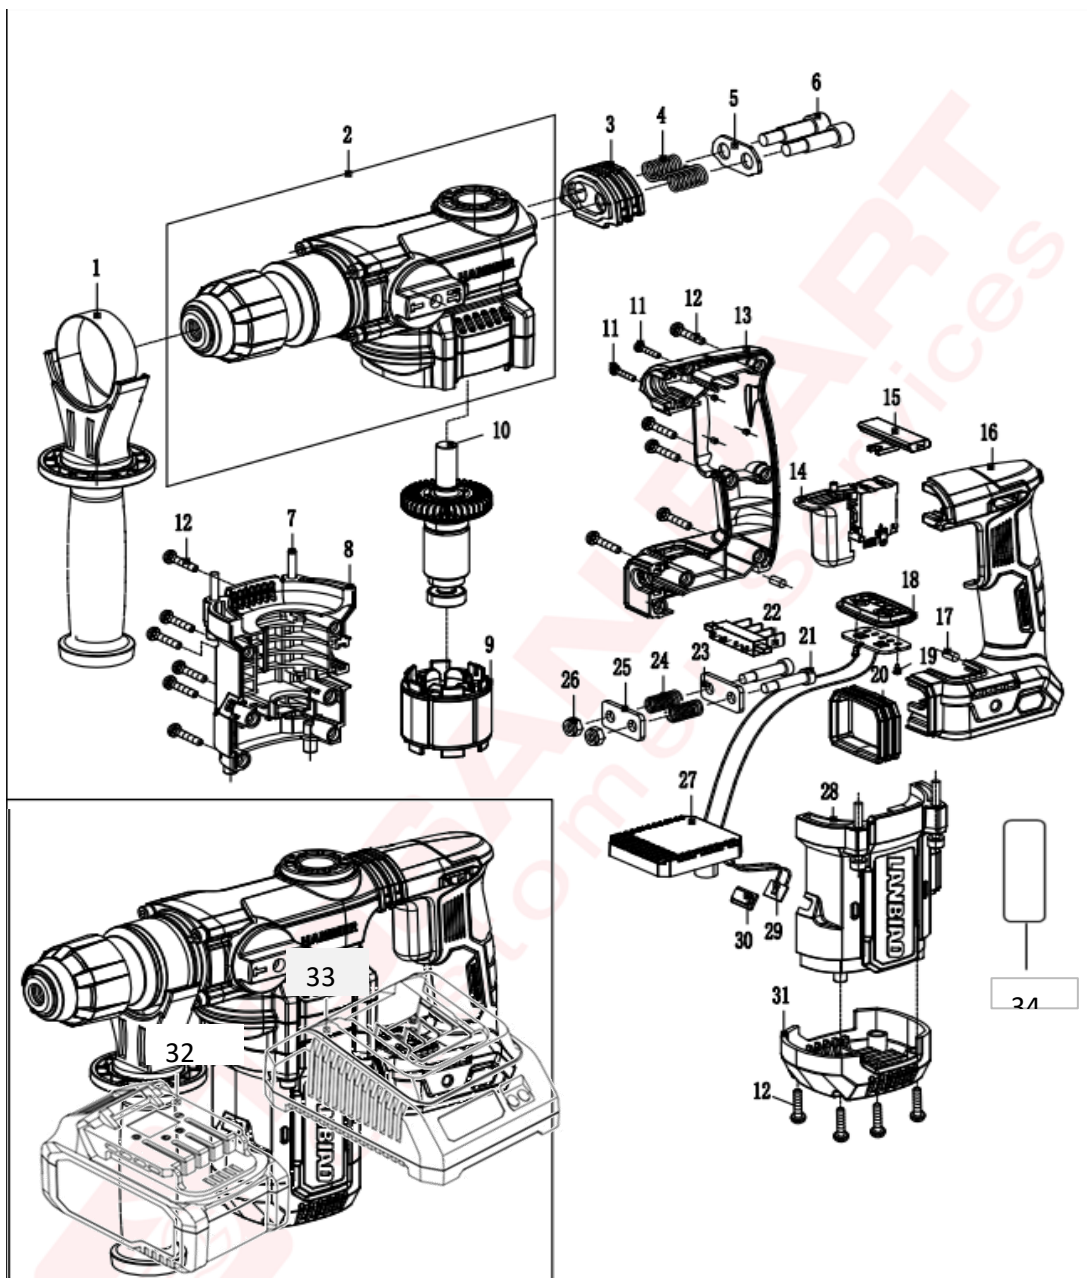

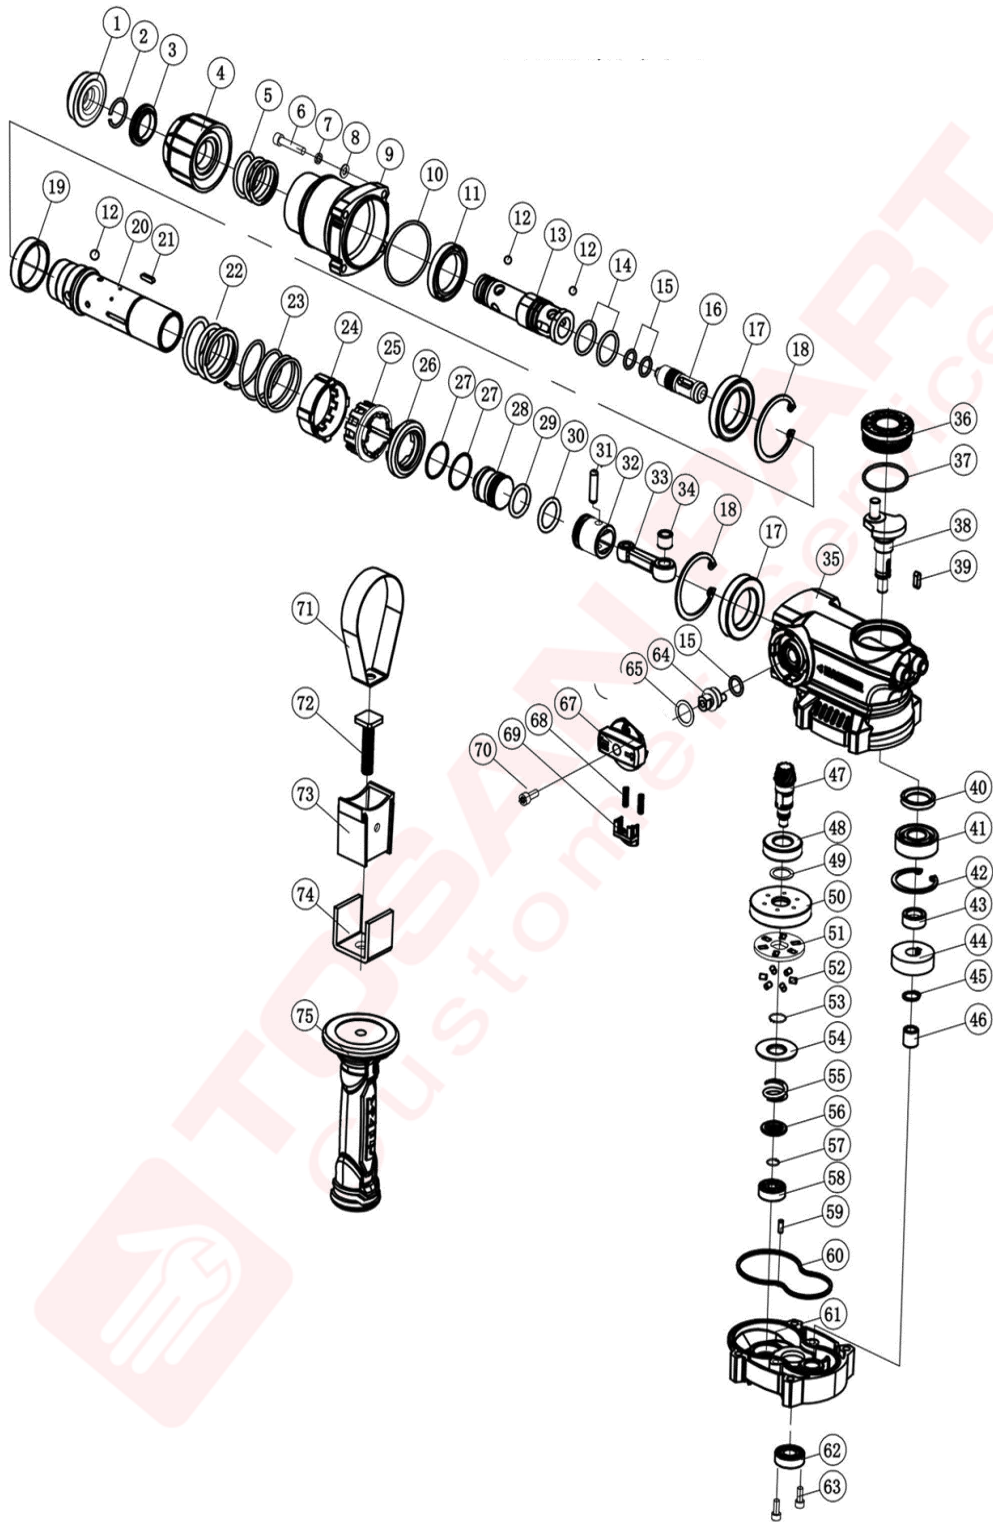

TOSAN PART
Customer Services

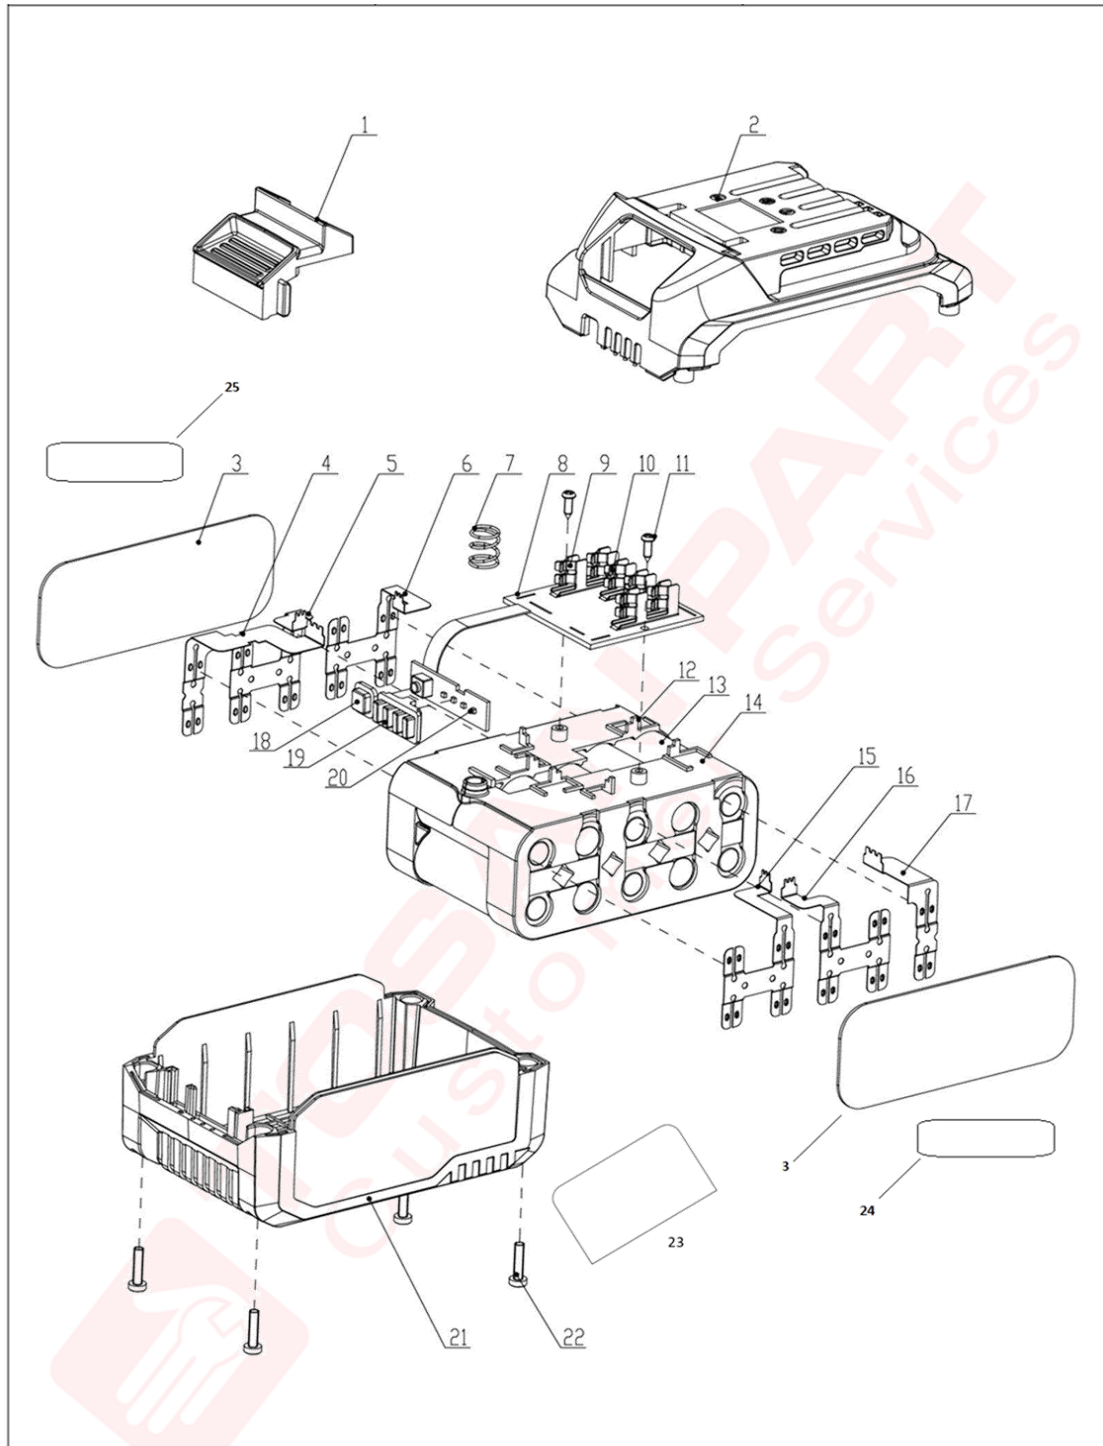



9801				
Number used	Technical code	CODE	Name of the piece	ROW
1	01-9801	01	Complete auxiliary handle assembly	1
1	02-9801	02	Complete gearbox assembly	2
1	03-9801	03	Upper vibration damper rubber	3
2	04-9801	04	Upper vibration damper spring	4
1	05-9801	05	Upper vibration damper metal washer	5
2	06-9801	06	Upper vibration damper screw	6
4	07-9801	07	Screw and washer	7
1	08-9801	08	Right housing	8
1	09-9801	09	Stator	9
1	10-9801	10	Complete rotor	10
2	11-9801	11	Screw	11
16	12-9801	12	Screw	12
1	13-9801	13	Right switch handle	13
1	14-9801	14	Switch	14
1	15-9801	15	Left and right chassis	15
1	16-9801	16	Left switch handle	16
2	17-9801	17	Plastic pin	17
1	18-9801	18	Control panel	18
1	19-9801	19	Lower impact damper rubber	19
2	20-9801	20	Lower vibration damper screw	20
1	21-9801	21	Battery connection base	21
1	22-9801	22	Lower vibration damper washer	22
2	23-9801	23	Lower vibration damper spring	23
1	24-9801	24	Lower vibration damper washer	24
2	25-9801	25	Nut	25
1	26-9801	26	Control board	26
1	27-9801	27	Left housing	27
1	28-9801	28	LED	28
1	29-9801	29	LED cover	29
1	30-9801	30	Bottom housing	30
1	31-9801	31	Battery	31
1	32-9801	32	Charger	32

9801

Number used	Technical code	CODE	Name of the piece	ROW
1	33-9801	33	Label	33
1	02.1-9801	02.1	Rubber head	34
1	02.2-9801	02.2	Retaining ring	35
1	02.3-9801	02.3	Bushing	36
1	02.4-9801	02.4	Sheath	37
1	02.5-9801	02.5	Spring	38
4	02.6-9801	02.6	Screw and washer	39
1	02.9-9801	02.9	Cylinder housing	40
1	02.10-9801	02.10	O-ring	41
1	02.11-9801	02.11	Oil seal	42
8	02.12-9801	02.12	Ball bearing	43
1	02.13-9801	02.13	Chisel holder	44
3	02.14-9801	02.14	O-ring	45
3	02.15-9801	02.15	O-ring	46
1	02.16-9801	02.16	Striker (punch)	47
2	02.17-9801	02.17	Bearing 6906	48
2	02.18-9801	02.18	Circlip	49
1	02.19-9801	02.19	Bushing	50
1	02.20-9801	02.20	Cylinder	51
2	02.21-9801	02.21	Circlip on cylinder	52
1	02.22-9801	02.22	Small spring on cylinder	53
1	02.23-9801	02.23	Large spring on cylinder	54
1	02.24-9801	02.24	Plastic locking gear	55
1	02.25-9801	02.25	Speed change gear	56
1	02.26-9801	02.26	Gear on cylinder	57
2	02.27-9801	02.27	Retaining ring	58
1	02.28-9801	02.28	Suspended striker	59
1	02.29-9801	02.29	O-ring	60
1	02.30-9801	02.30	O-ring	61
1	02.31-9801	02.31	Piston pin	62
1	02.32-9801	02.32	Piston	63
1	02.33-9801	02.33	Connecting rod	64

9801				
Number used	Technical code	CODE	Name of the piece	ROW
1	02.34-9801	02.34	Roller bearing	65
1	02.35-9801	02.35	Gearbox	66
1	02.36-9801	02.36	Grease cap	67
1	02.37-9801	02.37	O-ring	68
1	02.38-9801	02.38	Eccentric on gear	69
2	02.39-9801	02.39	Rectangular key	70
1	02.40-9801	02.40	Oil seal	71
1	02.41-9801	02.41	Bearing 6202	72
1	02.42-9801	02.42	Circlip	73
1	02.43-9801	02.43	Intermediate bushing	74
1	02.44-9801	02.44	Eccentric gear	75
1	02.45-9801	02.45	Circlip	76
1	02.46-9801	02.46	Roller bearing	77
1	02.47-9801	02.47	Bevel gear	78
1	02.48-9801	02.48	Bearing 6002	79
1	02.49-9801	02.49	Washer	80
1	02.50-9801	02.50	Clutch	81
1	02.51-9801	02.51	Clutch hub	82
6	02.52-9801	02.52	Clutch spring	83
1	02.53-9801	02.53	Retaining ring	84
1	02.54-9801	02.54	Washer	85
1	02.55-9801	02.55	Spring	86
1	02.56-9801	02.56	Washer	87
1	02.57-9801	02.57	Retaining ring	88
1	02.58-9801	02.58	Bearing 627	89
2	02.59-9801	02.59	Pin	90
1	02.60-9801	02.60	O-ring	91
1	02.61-9801	02.61	Flange	92
1	02.62-9801	02.62	Bearing 6001	93
2	02.63-9801	02.63	Screw	94
1	02.64-9801	02.64	Mode change pin	95
1	02.65-9801	02.65	O-ring	96

9801				
Number used	Technical code	CODE	Name of the piece	ROW
1	02.67-9801	02.67	Mode change chassis	97
2	02.68-9801	02.68	Spring	98
1	02.69-9801	02.69	Chassis pin	99
1	02.70-9801	02.70	Screw	100
1	02.71-9801	02.71	Handle collar ring	101
1	02.72-9801	02.72	Screw	102
1	02.73-9801	02.73	Handle clamp	103
1	02.74-9801	02.74	Handle clamp adapter	104
1	02.75-9801	02.75	Auxiliary handle	105
1	31.1-9801	31.1	Battery pack button	106
1	31.2-9801	31.2	Housing cover	107
2	31.3-9801	31.3	Sponge	108
1	31.4-9801	31.4	Nickel piece	109
1	31.5-9801	31.5	Nickel piece	110
1	31.6-9801	31.6	Nickel piece	111
1	31.7-9801	31.7	Spring	112
1	31.8-9801	31.8	PCB assy.	113
2	31.9-9801	31.9	Battery pack contact plate	114
2	31.10-9801	31.10	Battery pack contact plate	115
2	31.11-9801	31.11	Tapping screw	116
1	31.12-9801	31.12	PCB fixed plate	117
10	31.13-9801	31.13	Cell	118
1	31.14-9801	31.14	PCB fixed plate	119
1	31.15-9801	31.15	Nickel piece	120
1	31.16-9801	31.16	Nickel piece	121
1	31.17-9801	31.17	Nickel piece	122
1	31.18-9801	31.18	Button	123
1	31.19-9801	31.19	Lamp cover	124
1	31.20-9801	31.20	Electric quantity display PCB	125
1	31.21-9801	31.21	Housing support	126
4	31.22-9801	31.22	Tapping screw	127
1	31.23-9801	31.23	label	128

9801				
Number used	Technical code	CODE	Name of the piece	ROW
1	31.24-9801	31.24	label	129
1	31.25-9801	31.25	label	130
1	32.1-9801	32.1	Charger housing cover	131
1	32.2-9801	32.2	Housing contact plate holder	132
1	32.3-9801	32.3	Plate	133
7	32.4-9801	32.4	Tapping screw	134
1	32.5-9801	32.5	PCB assy.	135
1	32.6-9801	32.6	Charger housing	136
4	32.7-9801	32.7	Tapping screw	137
1	32.8-9801	32.8	cabel	138
1	32.9-9801	32.9	label	139
1	32.10-9801	32.10	label	140
1	32.11-9801	32.11	label	141